




Reading the Performance Curve

Diaphragm pump performance curves may be downloaded in the downloads tabs of individual part numbers. View our [air-operated diaphragm pumps](#) and other pump products.

You must know the following data:

- Required discharge pressure.
- Air pressure available at the air inlet of the pump.
- Required flow rate.

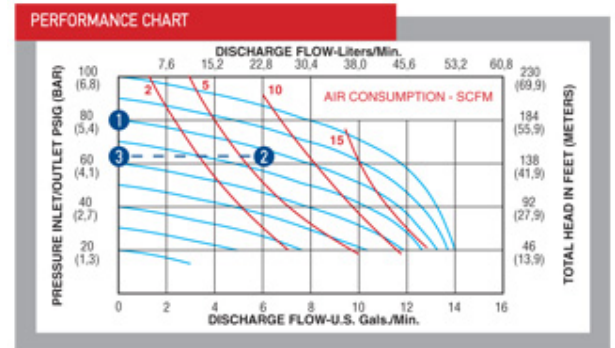

TO OBTAIN DISCHARGE PRESSURE:

Using the performance chart for a 1/2" pump shown. If 80 psi is available at the air inlet and the required capacity of the pump is 6 GPM. Follow the blue concave curve at 80 psi **1** as it slopes to the right and intersects with the 6 GPM vertical line **2**. By tracking horizontally back to the left (Y) axis, the discharge pressure is ascertained—65 psi **3**. (Right axis converts PSI to feet/meters).

TO OBTAIN REQUIRED AIR INLET PRESSURE:

Reverse the steps above:

Choose required discharge pressure (65 psi) **3** on left (Y) axis, go directly across the graph to the intersection of the correct flow rate (6 GPM) **2**, then track up and back toward the left (Y) axis along the blue curve; and the correct required air pressure can be obtained (80 psi) **1**.

Note: If greater outlet pressure vs. air inlet pressure is required—select a larger pump.

TO OBTAIN AIR CONSUMPTION:

The convex red lines represent the air consumption (standard cubic feet per minute), and the closest red line to where the blue line and the flow rate intersect **2** represents the air capacity required. On our example, the air consumption would be approximately 6 SCFM. To convert SCFM to m3/h (N) multiply by 1.7

INSTALLATION

1. A lube-free, clean, dry compressed air source (or any nonflammable, compressed gas) is recommended. Use a filter that is capable of filtering out particles larger than 50 microns.
2. Pumps should be mounted in an upright position with the exception of the 1/4" models or any pump with Max-Pass® valves. These pumps can be mounted in any position.
3. Install a particle fluid filter on the fluid suction line when particles in the fluid exceed the maximum particle size specification of the pump or particles are sharp enough to cut the diaphragms.
4. Never restrict fluid suction lines by means of a reduced pipe size (smaller than pump inlet size) or control the pump with valves on the fluid inlet side of the pump. Flow control valves should be installed on the discharge side of the pump.
5. Limit fluid inlet pressure to 10 PSIG or (.68 BAR)

All-Flo Pump Company, LLC World Headquarters
7750 Tyler Blvd. | Mentor, Ohio 44060 | Phone: (440) 220-5482 | Fax: +1-440-354-9466
Copyright ©2011 All-Flo Pump Company, LLC
MUM Industries is the parent (holding) company for All-Flo Pump Company, LLC
www.mumindustries.com
All-PūR® and Max-Pass® are registered Trademarks of All-Flo Pump Co. LLC